



HONGSEN 鸿森

2021-2022

HONGSEN MACHINERY
Escort For Safe Refrigeration

REFRIGERATION A/C SYSTEM ACCESSORIES

制冷空调系统配件

制冷
空
调
系
统
配
件

REFRIGERATION A/C SYSTEM
ACCESSORIES



HONGSEN® 鸿森®

浙江鸿森机械有限公司

ZHEJIANG HONGSEN MACHINERY CO.,LTD

地址：浙江省诸暨市店口镇制冷工业区

Address: Diankou refrigeration industrial park, Zhuji city, Zhejiang province


电话 /Tel: 0575-87696107/0575-87607883/0575-87608106

传真 /Fax: 0575-87698985 PostCode:311802

E-mail: hongsen@zjhsjx.com;hongsen6@zjhsjx.com;zhongsen@163.com

FRF 型热力膨胀阀

FRF Thermostatic Expansion Valve

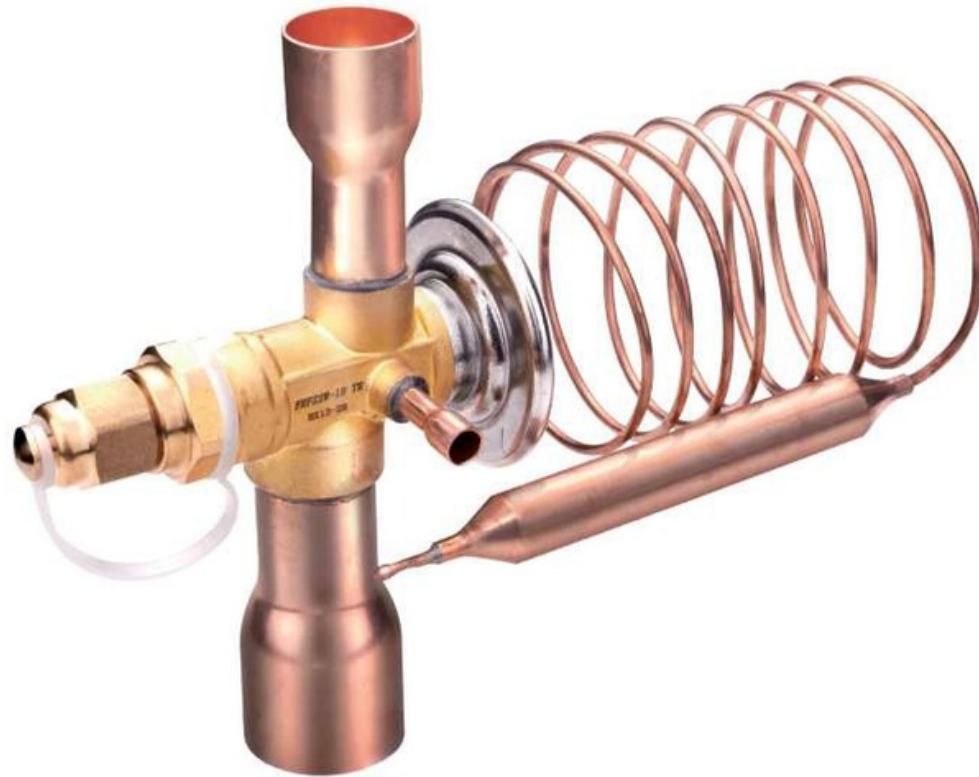

FRF型 (英制焊口)
Model FRF (inch ODF)

安装使用要求 Installation and usage requirements

1) 焊管式膨胀阀在与系统管子焊接时，必须注意以下几点： 1.1、首先用湿布或湿棉纱包在阀体上保护阀体，以防在焊接时 温度过高烧坏阀内零件。 1.2、焊接时请注意焊枪火焰方向为朝阀体外向。 1.3、选用低温银焊条焊接。 2) 膨胀阀维修保养应指定专业人员进行。	1) welded pipe expansion valve with the system pipe welding, we must pay attention to the following points; 1.1、use a damp cloth or a wet cotton bag to protect bodyon the body, To avoid high that temperature burn in the valve parts in welding. Please note that the 1.2、welding torch flame direction toward the body outward. 1.3 low temperature silverelec trode welding. 2) expansion valve maintenance should be designated professional staff.
---	---

技术参数 Technical Parameters

适用制冷剂 Applicable Refrigerants	R22、R134a、R404A冷媒等介质
适用介质温度 Applicable Medium	R22: -40°C~+10°C; R134a:-30°C~+10°C; R404A:-40°C~+10°C
过热度调节范围 Adjustable Range of Superheat	2°C~8°C
最大工作压力 Maximum Working Pressure	2.8MPa
最大测试压力 Maximum Testing Pressure	3.2MPa